

Wall Mounted Washer & Dryer

XQG30-700H

--	--

Troubleshooting

Sometimes it is not necessarily a fault in the following cases. Before commissioning repair, please check and confirm according to the following list.

Error code	Code definition	How to remove
E1	Abnormal Drainage	Clean the filter first and then drain it again. If still abnormal, please contact the after-sales service center.
E2	Abnormal Door lock	Pause the program and press the start button to unlock and lock the door again.
F3	Abnormal Temperature sensor	Please contact the after-sales service center.
E4	Abnormal Water inflow	Pause the program, check the inlet system, and clean the inlet valve. If the problem remains, please contact the after-sales service center.
F4	Abnormal Heating tube	Power off and restart. If the problem remains, please contact the after-sales service center.
F7	Motor stop alarm	Power off and restart. If the problem remains, please contact the after-sales service center.
E8	Water level overflow alarm	Automatic release. If the problem remains, please contact the after-sales service center.
FA	Abnormal Water level sensor	Contact the after-sales service center.
FC	Abnormal communication	Power off and restart. If the problem remains, please contact the after-sales service center.
Ub	Uneven distribution during spin	Shake and scatter the clothes evenly.
F2	Abnormal drain motor	Power off and restart. If the problem remains, please contact the after-sales service center.
EC	Overtension	Please check whether the voltage is too high. The problem will be solved when the voltage is back to normal.
LO	Automatic dispensing box with little or no detergent	The detergent needs to be readded.
EA、Eb Ed、EE F8、F9	Abnormal Driver	Power off and restart after 30 seconds. If the problem remains, please contact the after-sales service center.
● After the alarm, the buzzer will ring once every 10 minutes to remind the user that it will not stop unless the user intervenes. ● Inlet pressure 0.03mpa - 0.5mpa.		

Energy efficiency testing program:


Press “RINSE+” + “POWER” to enter the energy efficiency testing program. Select half-load or full-load by pressing the third key from left to right. If full-load is set, the time will be displayed alternately as “5H” (H is uppercase) and “36” . If half-load is set, the time will be displayed alternately as “5H” (H is lowercase) and “36” .

CONTENTS

Product features	01
Safety information	02
Before start	07
Non-Washable items	09
Non-drying items	09
Before wash	10
Instructions on detergent	11
Wash programs	12
Buttons and functions	13
Cleaning	20
Related washing problem	21
Troubleshooting	22
Energy efficiency testing program	23

Product Features

Its unique design allows it to wash clothes quickly and efficiently

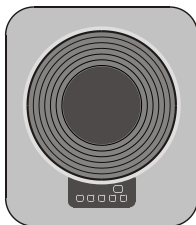

Super daily washing function

It can clean towels, shirts, underwear, socks and other daily necessities. Create a cleaner home for you.

Boiling wash

Boiling wash function ensures that there is no residual detergent after washing, which can better protect the baby's delicate skin.

Quick wash

Quick wash takes only 15 minutes. Efficient washing saves you water, electricity and time.

Night

Choose night wash program to wash your clothes in peace at night while you sleep.

Low noise

The special DD inverter lower noise motor can effectively reduce the noise when washing.



Hexagon diamond drum

The hexagonal bump on the drum can protect the clothes and prevent them from damage.



Transplant door

The the transparent door design helps you to know the washing status.



Child lock

The child lock function can effectively prevent children from touching the button and opening the machine door during washing.



Drying program

With the drying program, cloth wash and dry all in one machine to make your life easier.



Troubleshooting

Sprocess	Action	Problem
Before start	For first use, there may be a small amount of water in drain pipes and machines.	This is a normal phenomenon, the residual water in the factory inspection.
Washing	Do not work	- Is there any power failure? - Is the power plug firmly plugged into the socket? - Is the fuse or current circuit breaker of the power in good condition? - Do you press the "POWER" switch? - Do you turn on the tap? - Is the delay start function seted? - Do you press "START/PAUSE" ?
	Machine could not operate	- Is the "CHILD LOCK" function set? - After selecting the program, please press the "START/PAUSE" button to run the machine.
	The water tap is leaking	- Whether the inlet pipe interface is installed in place? - Is the tap damaged?
	No or slow water	- Is the water tap turned on? Is the water off? - Is the water inlet valve blocked? (Please clean the inlet valve) - Is water tap, or inlet pipe frozen? - Has the delay start function been selected? - Have not pressed the ? START/PUASE? button to start? - Does the inlet pipe bend? - Is the water pressure too low?
	Have a abnormal sound	- Does the machine tilt and sway? - Does it enter coins, zippers or other foreign objects? - Is it the clothes button, or zipper? - Is it the working sound of the drain pump or motor? (It is normal)
	Bad washing effect	- Is the type and amount of detergent appropriate? - Is the program selected correctly?
	Washing the inability to	- Does the weight of the clothes exceed the standard washing capacity of the washing machine? - Have you chosen the ? Night Wash? program?
	Stops while the washing machine is running	- Is there a sudden power or water outage? - Have you pressed the "START/PAUSE" button?
Spinning	Not spin	- The washing machine program is set the drainage time, and it will take some time before spin process begins. - Are clothes knotted or wound?
	Loud spin sound	- Is the washing machine stationary on the wall? - Whether the clothes are knotted or wound? - Does the washing machine touch anything else? - Whether any foreign matter fell in?
	The clothes are still wet after spin	- Different types of clothing have different spin effects. - Are there too few clothes and the washing machine eccentrically protected?
Draining	No drainage or slow drainage	- Has the drain been bent, blocked and frozen? - Is the filter blocked?
Others	Local heating of control panel	It is a normal heat dissipation of the electronic components.
	The washing is not finished after the appointment time	- Clothes are offset during washing process. - Bad inlet and drainage conditions lead to time extended.

Related washing problem

The following instructions describe the cleaning of the washing machine parts after long time use.



Does freezing cause a malfunction in the washing machine?



At the end of the washing process, a small amount of water will remain in the water hose or washing machine barrel. Water can freeze at low temperature. In this case, follow the instructions below.

- Wrap a hot towel around the joint of the water hose.
- Turn off the water tap and separate it from the inlet pipe. Then put the water hose in hot water (less than 50°C).
- Add 2L hot water in the washing machine barrel and wait for 10 minutes. (less than 50°C).
- Reconnect the inlet hose, turn on the water tap, and check the water supply and drainage system.



How do I clean the machine water barrel?



Buy washing machine barrel cleaner at seller's place.

- Please use the cleaner properly according to the instructions.
- Clean the barrel according to the following instructions.
 1. Add machine barrel cleaner into the barrel.
 2. Select the "Tub clean" program (Without "Tub clean" program, you could select the "Boiling" program).
 3. Press the "START / PAUSE" button to start cleaning.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

Safety Information

This product is not suitable for people with physical, sensory or mental disabilities (including children). Please use it safely under the guidance of the guardian.



Avoid situations that may cause death or serious bodily harm.



Avoid situations may result in minor bodily injury or product damage.

WARNING



Do not use the washing machine when the power cord is damaged or loose.



Otherwise, it may cause electric shock, short circuit or fire.

Please contact the after-sales service center.




If the washing machine is not running, smoking or giving off an abnormal smell, please cut off the power supply and contact the service center immediately.



Otherwise, it may cause electric shock, short circuit or fire.




Do not scratch, bend, stretch, or wind the power cord to cause damage, distortion, or knot. Do not prevent or embed heavy objects on the power cord.

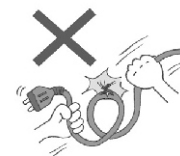

Otherwise, it may damage the power cord and increase the risk of fire and electric shock.



Do not use wet hands to unplug or plug the power cord.

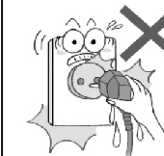

Otherwise, it may cause the electric shock.



Ensure power supply voltage, frequency and current match with product specification.



Otherwise, it may cause fire or electric shock.

Lint must not be allowed to accumulate around the machine.



Do not dismantle, repair or reassemble the washing machine without the assistance of service engineer.




Otherwise, it may cause fire, electric shock or personal injury.

Please contact the after-sales service center.

Safety Information

WARNING

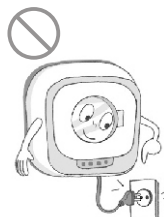

Plug the power cord into an wall socket that can withstand at least 10A current and use the socket for this appliance only. Never use an extension cord.

Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.




In the event of a gas leak (Such as propane gas, LP gas, etc.), Ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

Otherwise, it may cause sparks, explosions, fires or burns.



If the power cord lead is covered with dust or water, wipe it with a dry cloth before use.

Otherwise it may cause a fire.

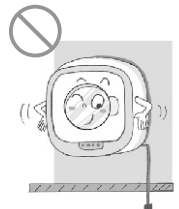

For safety purposes, make sure the wire is grounded, technical failure or short circuit may lead to electric shock.

Please read the user manual or contact the service center for more information about the grounding method.



Do not expose the washing machine to the wind and rain.

Otherwise, it may lead to electric shock, fire, technical failure or machine deformation.



Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances. It is also not allowed to place the above substances near the washing machine

This may result in electric shock, fire, or an explosion.



Please unplug the power cord before cleaning or repairing.

Otherwise you might get an electric shock or get hurt.

Do not spill water on the washing machine, or it may cause short circuit or electric shock.



If the water supply pipe falls off, the washing machine is flooded. Please do not enter the room where the washing machine is located and contact the after-sales service center as soon as possible.

Otherwise it could lead to electric shock.



Do not install the washing machine near the fire. Do not place candles or cigarettes on the washing machine.

Otherwise it may cause fire or deform the machine.



Please do not wash and dry clothes that have been soaked with gasoline or other inflammable, explosive and toxic solvents. These clothes release material that could ignite or explode. Wash the clothes by hand first to make sure all traces of liquids, fixtures and particles are removed. Then put it in the washing machine. The dangerous substances include acetone, alcohol, gasoline, kerosene, liquid and detergent detergents, turpentine, wax, wax remover and etc.

Cleaning

Follow the following cleaning instructions to ensure the long-term healthy use of the washing machine.



WARNING

- Unplug the power cord before cleaning the washing machine. Otherwise it may result in electric shock or personal injury.
- So not spill water on the washing machine. Otherwise it could lead to a short circuit or an electrical shock.



■ Barrel cleaning

- Rust: rust may be caused by putting rusty water or rusting items, such as hair clips into the barrel, or by water staying in the bucket for too long.
- Derusting: squeeze the derusting paste onto the soft cloth or sponge, and then wipe off the rusty parts.
- * Do not use wire brush, or the barrel will be damaged.
- Detergent residues :(dark and stain) if you use the washing machine for long periods of time, add too much detergent, or repeat the cleaning process with a detergent that is not completely dissolved, the detergent residues may contaminate the clothing.



■ Washing machine cleaning

- Use a damp cloth to clean the washing machine.
- ! - Do not use synthetic detergents, diluents for products containing benzene. Otherwise the plastic parts of the washing machine could be damaged.

Attention - Use chemical cleaners as described in the user's manual.



■ Clean the drain filter

- Turn on the filter screw with a screwdriver and turn the filter counterclockwise.
- Cleaning filter
- Install the filter clockwise and tighten the screw with a screwdriver.




Attention

- Before opening the filter, place a water container on the bottom. Water may flow out after opening the filter.
- Do not attempt to open the filter cover when the product is running to avoid scald.

Drying

Choose drying program to dry the washed clothes.

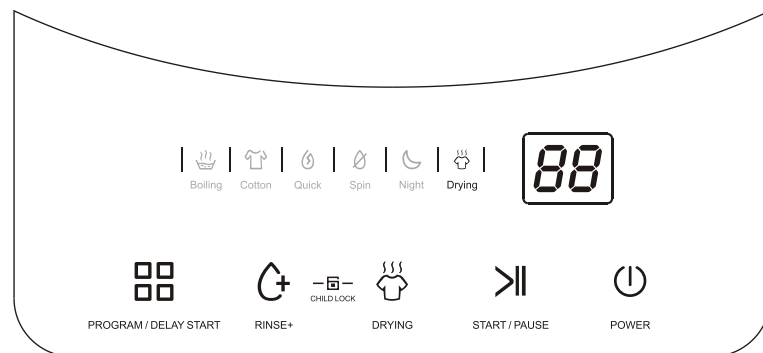

1. Open the machine door, put the clothes into the washing machine barrel, add the detergent and then close the door.
2. Press the "POWER" button.
3. Press "DRYING" button to choose drying program.
4. Press the "RINSE+" button to adjust the setting drying time from 120-150-180-210-240-60-90 minutes.

Display time corresponding table

Display	Time	Notes
2H/00	120Mins	2H and 00 alternate display
2H/30	150Mins	2H and 30 alternate display
3H/00	180Mins	3H and 00 alternate display
3H/30	210Mins	3H and 30 alternate display
4H/00	240Mins	4H and 00 alternate display
60	60Mins	/
90	90Mins	/

5. If washing process is required, first press the "START / PAUSE" button to select the required program, and then press the "DRYING" button.
6. Press "START / PAUSE" button.
After door locked, program will start properly.



- Do not dry the clothes that are not allowed to dry.

Notice

Safety Information

WARNING



Do not put your hands or metal objects under the washing machine while it is running.

Otherwise, it may cause personal injury.



When the door lock is fixed, do not force to open the door.

Otherwise it may break the door or lock, causing technical problems of the machine.



Children are forbidden to operate washing machines.

Never let your child stand on the washing machine or put his head in the tub.

Otherwise, it may cause personal injury, burns or electric shock.



Keep children away from the washing machine to prevent their hands from getting stuck in the door.



During operation, do not put your hands, sticks, metal objects into the washing machine tub or touch clothes.

Otherwise, it may cause personal injury, burns or electric shock.

WARNING:
Never stop machine before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.



The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Children being supervised not to play with the appliance



Install the washing machine close to the power socket. Unplug the power cord if you will not use the washing machine for a long time.

Otherwise, it may cause electric shock, short circuit or fire.



Do not use sharp objects to press the button.

Otherwise, it may cause the electric shock.



Safety Information

ATTENTION



Please turn on the water faucet to check for water leakage before use.

Improper connection can lead to water leakage.



Do not put pets or other animals into the washing machine tub.

Otherwise, it may cause injury.



Do not operate the washing machine when the automatic detergent dispenser is separated from the washing machine.



Do not put the magnet near the cover or the washing machine during the operation of the machine.



Install the washing machine on the solid wall.

Otherwise, it may cause abnormal vibration or noise.



Machine must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the machine, in such a way that a full opening of the machine door is restricted.



Do not use the washing machine net for washing.

Otherwise, it may cause abnormal vibration, wall damage or personal injury.



Do not stand on the washing machine or place heavy objects on it.




Do not use the washing machine and contact the service center when it is tilted or unbalanced.

Otherwise, it may cause personal injury.



Night

After choosing the night wash program, the machine will turn off the buzzer and only spin at a low speed to keep the nightwash quiet.

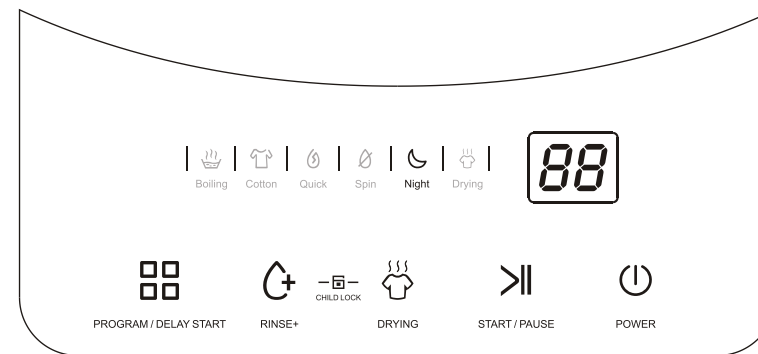

1. Open the machine door, put the clothes into the washing machine barrel, add the detergent and then close the door.

2. Press the "POWER" button.

3. Press "PROGRAM / DELAY START" and choose "Night" program. Automatically choose 40°C hot water, two rinse cycles and one nightwash spin process with buzzer off.

Note: press the "RINSE+" button could change the times of rinse cycle. (5 times is the maximum rinsing cycles can be selected)

4. Press "START / PAUSE" button. After door locked, program will start properly.

5. After the program finished, the EN will be displayed, and the clothes will be slowly shaken out for 12 hours, so that the clothes will not be clumped and wrinkled. During this period, press the "POWER" button to close.



Notice


- During the operation of the washing machine, you can press the "START / PAUSE" button and select other buttons to change the settings.



You can sleep or rest undisturbed while the machine is working.

Spin

Select the spin program to dry the clothes, without wash and rinse progress.

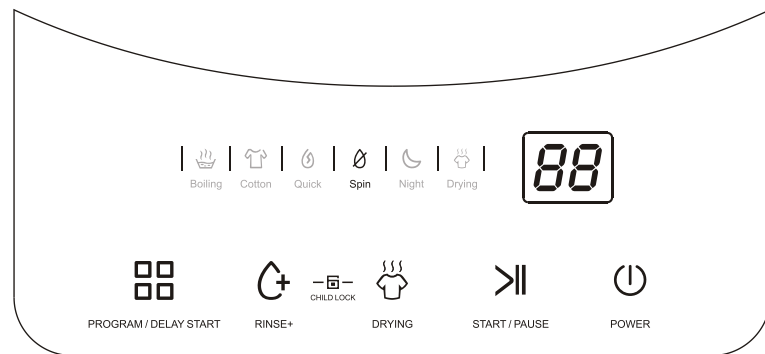

1. Open the machine door, put the clothes into the washing machine barrel, add the detergent and then close the door.
2. Press the "POWER" button.
3. Press "PROGRAM / DELAY START" and choose "Spin" program. If you need to increase the spin time, please press the "RINSE+" button to select (Maximum 11 minutes).
4. Press "START / PAUSE" button. After door locked, program will start properly.



Notice

- There may be water flowing into the barrel during the spin process to clean the clothes. Don't worry, this is not a mechanical problem.

Safety Information

WARNING



Use a soft wet cloth to remove detergent or dirt from the washing machine.

Residual detergent or dirt can deform the plastic part of the washing machine.



Close the door carefully to prevent the clothes from getting stuck.

Otherwise, it may damage the clothes or cause machine failure.



Please turn off the water faucet after use

The purpose is to prevent leakage caused by improper connection of inlet hose.



Please press the "START" button after turning off the water faucet, and slowly turn on the faucet after the water supply is restored or the water inlet is reconnected (When after a long period without using the machine).

Strong air pressure in inlet hoses and hoses can damage the washing machine or cause leaks and personal injury.



Do not use the washing machine for non-clothing objects.

Otherwise, it may cause abnormal vibration, damage the washing machine or cause personal injury.



Do not use strong acid cleaner. Do not put gasoline, alcohol, dry cleaners or other flammable and explosive substances into the washing machine as detergent.

Please select only household detergents that are suitable for the washing machine.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.



Do not use the washing machine for non-clothing objects.


Otherwise, it can cause abnormal vibrations during washing, which can damage walls, floors, clothes or washing machine parts.



Remove all liquid detergent from the washing machine before moving it.

Otherwise, it may cause leakage and machine failure.

Before Start

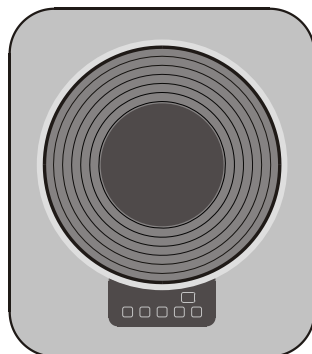

1 Before start

- Make sure the drain pipe is tightly connected.
- Minor leakage may occur during installation or during an accident cycle. This is not the result of a malfunction or mechanical failure, but rather the residual water left over from the product when it is tested for ex-factory performance.

2 Connect the water inlet hose and turn on the tap.

- Check whether there is leakage around the hose and the inlet hose connector.

3 Plug in the power cord.

- Check the grounding to prevent electric shock.




Attention

- If the power cord is damaged, to avoid danger, it must be replaced by the professionals from the manufacturer, its maintenance or similar department.
- The maximum weight of dry textile materials used in the washing machine is 3.0kg, and the drying rate is 1kg (2.5kg is recommended for washing and 0.5kg is recommended for drying). The quick washing procedure recommends washing a small amount of clothes below 1kg.
- If chemicals are used to clean clothes, the drying function cannot be used.
- Cotton waste is not allowed to pile up around the machine.
- Adequate ventilation must be provided to prevent the gas flowing backwards from the washing machine from entering the space to ignite other substances.
- This washing machine is only for cold water washing. Do not connect the inlet pipe to the hot water tap.

Quick

Choose the quick wash program for a small amount of clothes with a short washing time.

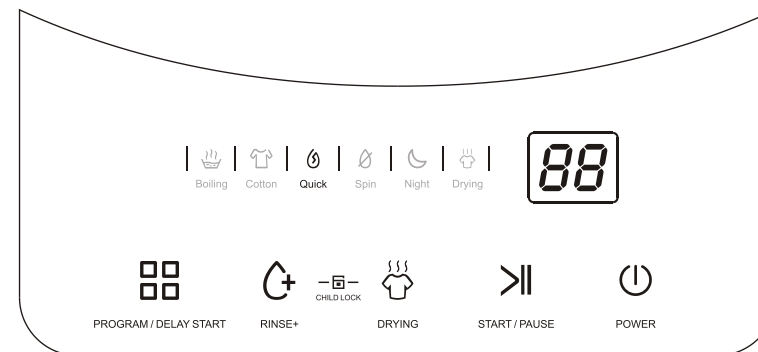

1. Open the machine door, put the clothes into the washing machine barrel, add the detergent and then close the door.
2. Press the "POWER" button.
3. Press "PROGRAM / DELAY START" and choose "Quick" program. Without heating, one rinse cycle and one time spin process.
4. Press "START / PAUSE" button. After door locked, program will start properly.



Notice


- During the operation of the washing machine, you can press the "START / PAUSE" button and select other buttons to change the settings.



Select this procedure when washing a small amount of clothing or clean clothes, it finish the washing process in a short time.

Cotton

Choose the normal program for daily washing of clothes (towels, socks and shirts) and other regular clothes.

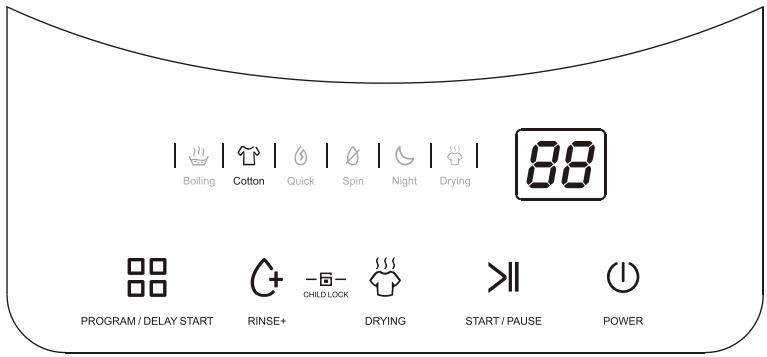

1. Open the machine door, put the clothes into the washing machine barrel, add the detergent and then close the door.
2. Press the “POWER” button.
3. Press “PROGRAM / DELAY START” and choose “Cotton” program. Automatically choose 40℃ hot water, two rinse cycles and one time spin process.
Note: press the “RINSE+” button could change the times of rinse cycle. (5 times is the maximum rinsing cycles can be selected)
4. Press “START / PAUSE” button.
After door locked, program will start properly.




Notice

- During the operation of the washing machine, you can press the “START / PAUSE” button and select other buttons to change the settings.




Please do not fold up the daily clothes such as towel, socks and shirt for washing.

Before Start

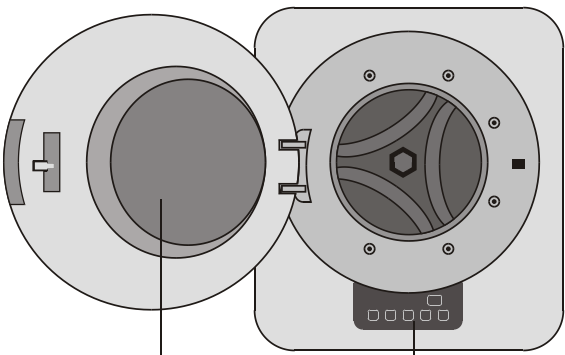


Door
(Do not open during operation)

Control panel

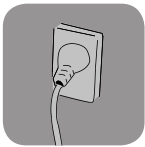

Power cord

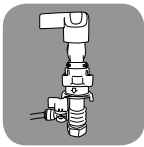

Water tap
(Please turn off the tap after the washing cycle is completed)

Note: please refer to the installation guide for product accessories.

Max. inlet water pressure: 0.5MPa.

Min. inlet water pressure, if necessary: 0.03MPa.

None-washable Items

- Polyurethane products containing cotton or foam (sponge)
- Blanket, electric blanket, wool over 10 mm blanket or carpet
- Animal wool pad or carpet
- Commercial washing supplements (laundry balls, dust filters, etc.)
- Rubber, nylon and plastic products
- Waterproof pad, sheets

About the clothes Shrinkage problem

Due to the different washing cycle, clothes type, weaving and sewing methods and management methods, the shrinkage degree of clothes is also different. Please read the laundry guide of the label carefully before washing.

- Items that shrink easily.


Non-drying Items

Non-drying Items

- Clothes marked as non-drying clothes.
- Things that are not resistant to high temperatures.
- Items that shrink easily.
- Do not dry unwashed items.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads.

Boiling wash

Choose boiling wash program to wash baby clothes, 100% cotton clothes, and anything that needs to be washed with high temperature water.

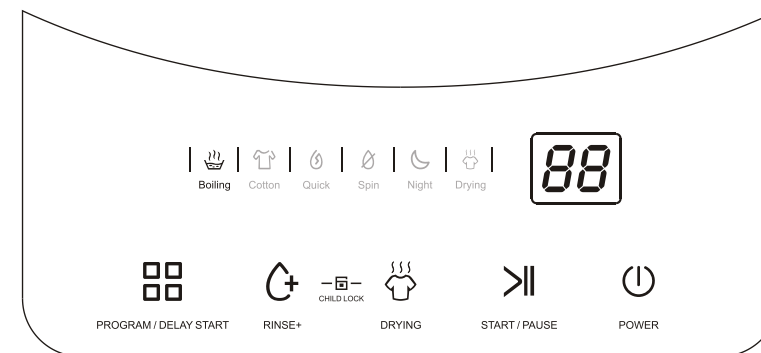

1. Open the machine door, put the clothes into the washing machine barrel, add the detergent and then close the door.
2. Press the “POWER” button.
3. Press “PROGRAM / DELAY START” and choose “Boiling” program. Automatically choose 95℃ hot water, one rinse cycle and one time spin process.
Note: press the “RINSE+” button could change the times of rinse cycle. (5 times is the maximum rinsing cycles can be selected)
4. Press “START / PAUSE” button.
After door locked, program will start properly.



Notice


- Please do not wash the clothes that not resistant to high temperature.
- During the operation of the washing machine, you can press the “START / PAUSE” button and select other buttons to change the settings.



Attention

- Please check whether the clothes are suitable for boiling wash (Pure cotton baby clothes, diapers, etc.)
- Please wash the white, colorful and dark clothes separately.

Buttons and functions

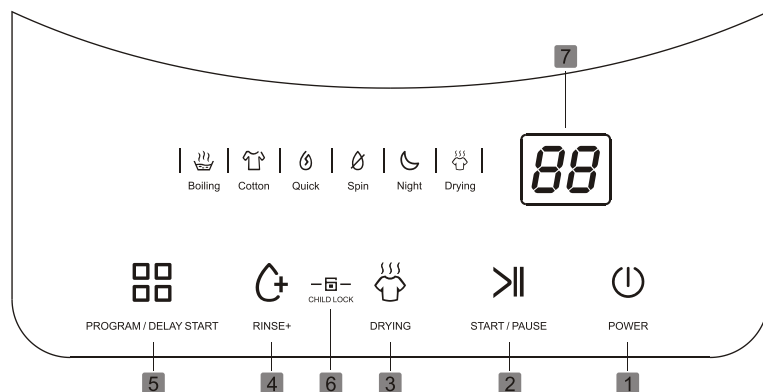

1. **“POWER”**
Use “POWER” button to turn on or off the washing machine.
2. **“START/PAUSE”**
Use “START/PAUSE” to run or stop the washing machine.
3. **“DRYING”**
Press the “DRYING” button, and the drying indicator on the control panel is on, indicating that the drying function is selected. While the indicator is off, indicating that the drying function is not selected.
4. **“RINSE+”**
After selecting the washing program, press the “RINSE+” button to increase the number of rinsing times. Under the spin process increases the spin time and the drying process increases the drying time.
5. **“PROGRAM / DELAY START”**
Press the “PROGRAM / DELAY START” button to select a washing program. The program indicator will display your selection.
(If “DELAY START” is required, please press and hold this button with 3 seconds after starting. When entering the DELAY START setting state, the LED DISPLAY will show “02” flashing. After the setting, the program has started, no more required to press the “START/PAUSE” button.)
6. **“CHILD LOCK”**
After starting, press and hold the “RINSE+” and “DRYING” button for more than 3 seconds to lock or remove the mode. In the “CHILD LOCK” mode, all keys are not available, required to removed the mode firstly.
7. **“LED”**
LED DISPLAY shows washing time and program information.




Notice

- If the power of the washing machine is interrupted during operation, the water may be too high or too hot to open the door temporarily.
- If the washing machine stops running due to power interruption during washing or rinsing, please open the door carefully for safety.

Before wash

- Waterproof pad or waterproof lining, heavy clothes, door mat, blanket, non-moisture permeable fabric can not be washed, rinsed, or spin.

- Abnormal vibrations in floating laundry can cause personal injury or damage to washing machines, walls, floors or clothes.

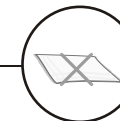


- Remove lighters and matches, coins, hair clips, curtain accessories, and clips from clothes.

- Metal items can damage clothes, washing machines or cause machine problems.
- Metal items can clog up the drain pipes, causing mechanical problems in washing machines.



- Check the laundry guide label.

- Follow the laundry instructions. Wash the colored and white clothes separately.

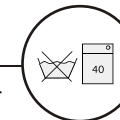


- Turn back the clothes you bought with fleece before washing them. Classify clothes according to fabric type (cotton, denim, chemical fiber, etc.) before washing.

- Mixed washing can damage clothes.




- Wash clothes with stubborn stains by hand before using the washing machine.

- Use detergent or bleach.

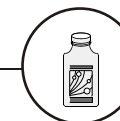


- Do not use the washing machine to wash clothes that are too thick or too heavy.

- Because heavy clothes can't be evenly distributed in the washing machine barrel, it will increase the vibration when rotating.

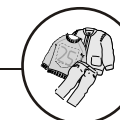

Instructions on detergent

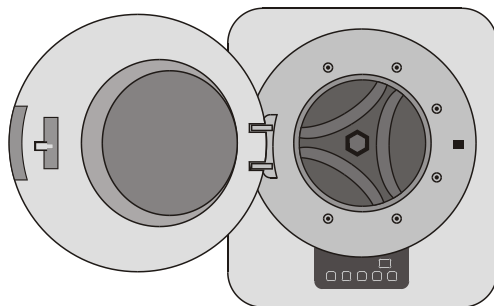

- Open the door of the washing machine without self-feeding function and pour the detergent directly into the washing barrel.
- The machine with automatic feeding function, take out the detergent box according to the instruction, pour in the detergent, and select the self-feeding program after installation.

Addition of detergent

Add detergent according to the recommended volume of detergent.
Concentrated detergent, please add the right amount of water before putting it into the washing machine or the automatic detergent box (self-feeding function machine).



Please read the following instructions carefully before adding detergent.

Attention

- Add appropriate amount of detergent to the washing machine. Since the machine uses very less water, please use low foam detergent. The amount of clothes should not exceed 5kg each time.
- Please remove detergent from door and control panel timely. Such pollution may damage the washing machine.
- Excess detergent may cause the following problems or failures.
 - Excessive amount of detergent can cause excessive foam, prolong the washing cycle, and disrupt the normal rinse and spin cycle.
 - After rinsing, the foam may remain on the clothes.
 - Too much foam from excessive amount of detergent may flow out of the washing machine.
 - When the detergent is excessive, the machine may stop working and empty the water immediately after it is filled with water. At this point, the display time will stagnate for a long time.

Wash programs

	Boiling wash	Standard	Night	Quick wash	Spin	Tub clean	Recommended capacity
Pure cotton shirt		•		•	•		11 ~ 12 Piece
Socks		•		•	•		19 ~ 20 Pair
Underwear		•	•	•	•		9 ~ 10 Set
Towel		•		•	•		8 ~ 9 Pair
Kitchen towel	•	•		•	•		16 ~ 17 Pair
Baby clothes	•	•		•	•		7 ~ 8 Piece
Diapers	•				•		9 ~ 10 Pair
Shirt		•		•	•		4 ~ 5 Piece
Swimsuit			•		•		4 ~ 5 Piece
Long underwear	•				•		3 ~ 4 Set
Knitwaer			•		•		1 ~ 2 Piece
Handkerchief		•		•	•		16 ~ 17 Pair
Silk stockings			•		•		9 ~ 10 Pair
Trousers		•		•	•		1 ~ 2 Pair



- Wash the clothes according to the instructions.
 - Excessive laundry load may reduce washing efficiency or cause abnormal vibration.
- Notice - Use the recommended program. Other options are also available. (Different fabric types may cause clothes deformation).

- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.
- The lint trap has to be cleaned frequently, if applicable.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- New hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Press the “RINSE+” + “POWER” button to enter the energy efficiency test program(energy Cotton 40℃, 700rpm).
- Energy Cotton 40℃, 700rpm and energy Cotton 20℃, 700rpm are the recommended programs to wash normally soiled cotton load at the rated load capacity.